

MODEL NAME	SRP-X700P OUTPUT			Firmware & Manger Version (C : controlable / N : not						select on the Manger	DEFINE FILE
	VIDEO	S VIDEO	RGB/COMPONET	1.0x	1.10	1.20	1.30	1.40	1.50		
FWD-32LX1R				N	N	N	N	N	N	-	FWD-32LX1R.pj7
FWD-32LX2	Option 2 VIDEO	Option 2 S VIDEO	HD15	N	N	N	N	N	N	-	FWD-32LX2.pj7
FWD-40LX1				N	N	N	N	N	N	-	FWD-40LX1.pj7
FWD-40LX2	Option 2 VIDEO	Option 2 S VIDEO	HD15	N	N	N	N	N	N	-	FWD-40LX2.pj7
FWD-42PV1	Option 1 VIDEO	Option 1 S VIDEO	INPUT 2	N	N	N	N	C	C	FWD-42PV1	FWD-42PV1.pj7
FWD-42PX2	Option 1 VIDEO	Option 1 S VIDEO	INPUT 2	N	N	N	N	C	C	FWD-50PX1/PX2	FWD-42PX2.pj7
FWD-50PX1	Option 1 VIDEO	Option 1 S VIDEO	INPUT 2	N	N	N	N	C	C	FWD-50PX1/PX2	FWD-50PX1.pj7
FWD-50PX2	Option 1 VIDEO	Option 1 S VIDEO	INPUT 2	N	N	N	N	C	C	FWD-50PX1/PX2	FWD-50PX2.pj7
FWD-50PX3	Option 2 VIDEO	Option 2 S VIDEO	RGB/COMPONENT II	N	N	N	N	N	C	FWD-50PX3	FWD-50PX3.pj7
FWD-S42H1	VIDEO IN	S VIDEO IN	RGB/COMPONENT II	N	N	N	N	N	N	-	FWD-S42H1.pj7
FWD-S47H1	VIDEO IN	S VIDEO IN	RGB/COMPONENT II	N	N	N	N	N	N	-	FWD-S47H1.pj7
GXD-L52H1	VIDEO IN	S VIDEO IN	RGB/COMPONENT IN	N	N	N	N	N	C	GXD-L52H1	GXD-L52H1.pj7
GXD-L65H1	VIDEO IN	S VIDEO IN	RGB/COMPONENT IN	N	N	N	N	N	C	GXD-L52H1	GXD-L65H1.pj7
PFM-32C1	VIDEO COMPOSITE	VIDEO Y/C	INPUT 1 RGB/YUV	N	N	C	C	C	C	PFM-50C1	PFM-32C1.pj7
PFM-42B1	VIDEO COMPOSITE	VIDEO Y/C	INPUT 1 RGB/YUV	C	C	C	C	C	C	PFM-42B1/B2	PFM-42B1.pj7
PFM-42B2	VIDEO COMPOSITE	VIDEO Y/C	INPUT 1 RGB/YUV	C	C	C	C	C	C	PFM-42B1/B2	PFM-42B2.pj7
PFM-42V1	VIDEO COMPOSITE	VIDEO Y/C	INPUT 1 RGB/YUV	N	N	N	N	N	N	-	PFM-42V1.pj7
PFM-42X1	VIDEO COMPOSITE	VIDEO Y/C	INPUT 1 RGB/YUV	N	N	N	N	N	N	-	PFM-42X1.pj7
PFM-50C1	VIDEO COMPOSITE	VIDEO Y/C	INPUT 1 RGB/YUV	N	N	C	C	C	C	PFM-50C1	PFM-50C1.pj7
VPL-CX61	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	C	C	C	C	C	C	VPL-FX50/51/CX86/63/6	VPL-CX61.pj7
VPL-CX63	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	C	C	C	C	C	C	VPL-FX50/51/CX86/63/6	VPL-CX63.pj7
VPL-CX80	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	C	C	C	C	C	C	VPL-FX50/51/CX86/63/6	VPL-CX80.pj7
VPL-CX85	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	C	C	C	C	C	C	VPL-FX50/51/CX86/63/6	VPL-CX85.pj7
VPL-CX86	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	C	C	C	C	C	C	VPL-FX50/51/CX86/63/6	VPL-CX86.pj7
VPL-CX100	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	N	N	N	N	N	C	VPL-CX100/120/150/160	VPL-CX100.pj7
VPL-CX120	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	N	N	N	N	N	C	VPL-CX100/120/150/160	VPL-CX120.pj7
VPL-CX125	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	N	N	N	N	N	C	VPL-CX125/155/135/165	VPL-CX125.pj7
VPL-CX135	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	N	N	N	N	N	C	VPL-CX125/155/135/165	VPL-CX150.pj7
VPL-CX150	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	N	N	N	N	N	C	VPL-CX100/120/150/160	VPL-CX155.pj7
VPL-CX155	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	N	N	N	N	N	C	VPL-CX125/155/135/165	VPL-CX160.pj7
VPL-CX160	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	N	N	N	N	N	C	VPL-CX100/120/150/160	VPL-CX165.pj7
VPL-CW125	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	N	N	N	N	N	C	VPL-CW125	VPL-CW125.pj7
VPL-ES4	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	N	N	N	N	N	N	-	VPL-ES4.pj7
VPL-EW5	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	N	N	N	N	N	C	VPL-EW5/EX5/EX50	VPL-EW5.pj7
VPL-EX4	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	N	N	N	N	N	N	-	VPL-EX4.pj7
VPL-EX5	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	N	N	N	N	N	C	VPL-EW5/EX5/EX50	VPL-EX5.pj7
VPL-EX50	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	N	N	N	N	N	C	VPL-EW5/EX5/EX50	VPL-EX50.pj7
VPL-EX7	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	N	N	N	N	N	C	VPL-EW5/EX5/EX50	VPL-EX7.pj7
VPL-EX70	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	N	N	N	N	N	C	VPL-EW5/EX5/EX50	VPL-EX70.pj7
VPL-FE40	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT C	N	N	N	N	N	C	VPL-FE40/FX40	VPL-FE40.pj7
VPL-FH300	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT D	N	N	N	N	N	C	VPL-FH300/FW300	VPL-FH300.pj7
VPL-FW300	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT D	N	N	N	N	N	C	VPL-FH300/FW300	VPL-FW300.pj7
VPL-FW41	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT C	N	N	N	N	N	C	VPL-FE40/FX40	VPL-FW41.pj7
VPL-FX40	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT C	N	N	N	N	N	C	VPL-FE40/FX40	VPL-FX40.pj7
VPL-FX41	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT C	N	N	N	N	N	C	VPL-FE40/FX40	VPL-FX41.pj7
VPL-FX50	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	C	C	C	C	C	C	VPL-FX50/51/CX86/63/6	VPL-FX50.pj7
VPL-FX51	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	C	C	C	C	C	C	VPL-FX50/51/CX86/63/6	VPL-FX51.pj7
VPL-FX52	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT C	N	N	N	N	N	C	VPL-FX52	VPL-FX52.pj7
VPL-PX11	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	C	C	C	C	C	C	VPL-PX11	VPL-PX11.pj7
VPL-PX35	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT D	N	N	C	C	C	C	VPL-PX41/40/35	VPL-PX35.pj7
VPL-PX40	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT D	N	N	C	C	C	C	VPL-PX41/40/35	VPL-PX40.pj7
VPL-PX41	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT D	N	N	C	C	C	C	VPL-PX41/40/35	VPL-PX41.pj7
VPL-TX7	VIDEO IN VIDEO	VIDEO IN S VIDEO	INPUT A	N	N	N	N	N	C	VPL-EW5/EX5/EX50	VPL-TX7.pj7

PROJECTOR / DISPLAY INPUT

*NEW
*NEW